

Instruction List

	Item	Description	Pls take care of the the lowercase or Capital of		Example	
			<i>SMS format for setting</i>	<i>Reply</i>		
1	begin	Initializes the unit, all settings by user will be set blank.		begin+123456	begin ok	begin123456
2	admin	Set authorized number, only these numbers can control the unit.	On	admin+123456+space+1991797073	admin ok	admin123456 13417411616
			Off	noadmin+123456+space+1991797073	noadmin ok	
3	sos		on	sos+123456+space+13912345678	sos number ok	sos,13948256789,1391234 5678 sos123456 13948256789
			off	nosos+123456	nosos number ok	
4	password	Set password.		password+old 123456+space+new 123456	password ok	password123456 666888
5	tsn	Set interval between geo-info messages.	On	t***s***n+123456 (s=second, m=minute, h=hour)	no reply	t030s005n123456 (this sends 5 messages 30 seconds apart. For continuous transmission,
			Off	notn+123456	notn ok	
5	timezone	Set GMT time zone number.		time zone+123456+space+GMT No.	time ok	timezone123456 -4

6	monitor	Switch to the monitor mode. You will hear sounds near the unit after you call it.		monitor+123456	monitor ok	monitor123456
7	tracker	Switch to the tracking mode, you will get geo-info after you call it.		tracker+123456	tracker ok	tracker123456
8	stockade	Set a geo-fence (via coordinate of two diagonal points). Alarm will be sent when exceed the limit.	On	stockade+123456+space+long,lat;long,lat	stockade ok	stockade123456 114.116500E,22.600000N;14.117000E,22.650000N
			Off	nostockade+123456	nostockade ok	
9	help me	Send alarm message when the SOS button is pressed.	On	press SOS for 3s	help me	alarm will be sent to authorized number on turn, untill you reply with SMS "help me".
			Off	help me		
10	speed	Set a speed limit. Alarm will be sent when limit exceeded.	On	speed+123456+space+080(km/h)	speed ok	speed123456 080
			Off	nospeed+123456	nospeed ok	
11	move	Set a 500m circle centered at the unit current location.. Alarm will be sent when unit moves outside of circle.	On	move+password	move ok	move123456
			Off	nomove+password	nomove ok	
12	APN	Set APN (old one will be replaced when a new one is set)		apn+123456+apn content	apn ok	apn123456 apn
	APN user	Set APN username		apnuser+123456+space+content	apnuser ok	apnuser123456 user

13	APN pw	Set APN password		apnpasswd+123456+space+content	apnpasswd ok	apnpasswd123456 password
14	adminip	Set Home IP and Port of the server,and update gps info by cell id	On	adminip+123456+space+ip+space+port	adminip ok	adminip123456 103.30.6.40 9876
			Off	noadminip+123456+space+ip+space+port	noadminip ok	
16	sossms	enable sos sms		sossms+123456	sossms ok	sossms123456
	nosossm s	disable sos sms		nosossms+123456	no sosms ok	nososms123456
17	soscall	enable sos call		soscall+123456	soscall ok	soscall123456
	nososcall	disable sos call		nososcall+123456	no soscall ok	nososcall123456
18	sleep	efault mode-save much power,tracker will fall asleep in 5 minutes		sleep+123456+space+time	sleep time ok	sleep123456 time

		tracker will enter sleep mode after detect no shock in 5 minutes		sleep+123456+space+shock	sleep shock ok	sleep123456 shock
19	SMS Tracker	Latitude & longitude query		G+123456# or where		G123456# or where
20	Restore factory setting	Effective by ADM number		format	The tracher will immediatly restore the factory settings.All previous settings will be canceled.	format
21	Upload command	unit second 15s		upload+123456+space+15	upload ok	upload123456 15
22	gprs ON/OFF	gprs shut GPRS		nogprs+123456	nogprs ok	nogprs123456
22	gprs ON/OFF	gprs Open GPRS		gprs+123456	gprs ok	gprs123456

23	shock alert	Arm	ON	shock+password	shock ok	shock123456
		unarm	OFF	noshock+password	noshock ok	noshock123456
26	query	Effective by ADM number		param1		param1
				param2		param2
28	vibrate phone alarm on/off	defaulted ON		vibcall123456	vibrate phone alarm set ok	
				novibcall123456	no vibrate phone alarm set ok	
29	vibrator sms alarm on/off	defaulted ON		vibalm123456	vibrator sms alarm set ok	
				novibalm123456	no vibrator sms alarm set ok	
30	Indicated light	Red light		power indicator	bright during charging	flash when low battery
		Blue light		GPS Light GPS indicator	bright when no GPS	flash during positioning

	light status	Green light		GPRS Light GPRS indicator	GPRS bright when no connect with GPRS	flash when GPRS connected ok
--	--------------	-------------	--	---------------------------	---------------------------------------	------------------------------

31 language LAG[1 or 2]
option 1=English 2=chinese

Switched to English LAG1